

Ejector Assembly Screws



Features supplied as standard unless otherwise specified.

FOR QUOTING OR ORDERING, SPECIFY:

Ejector Assembly Screws

Position: STD Specify

Recommended position from table provided standard. If a different position is required, specify below.


EASx _____

EASy _____

Omit upper assembly holes

Omit upper assembly screws

Ejector Assembly Screws are used to hold the plates of the ejector assembly together (including the ejector bar and retainer).

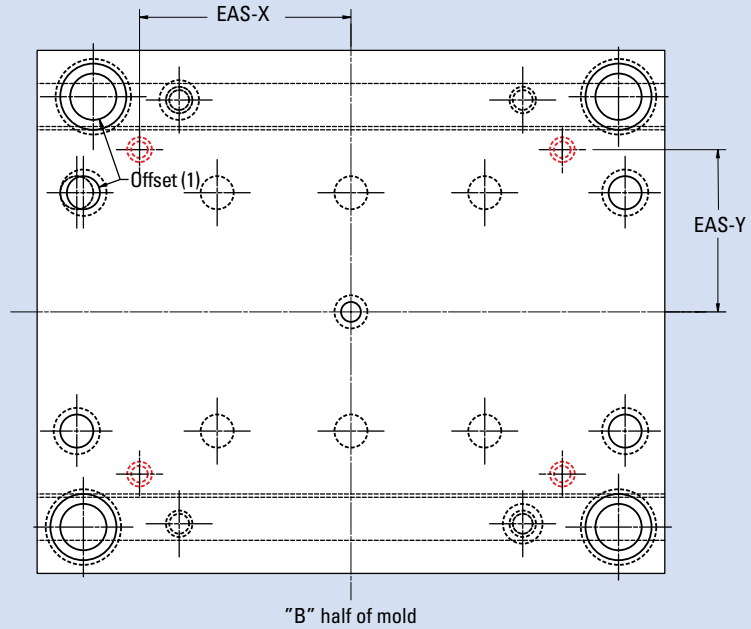

Ejector Assembly Screw Positions

BASE SIZE	SCREW SIZE	EASx	EASy	BASE SIZE	SCREW SIZE	EASx	EASy
88	5/16-18	3.375	2.250	1518	3/8-16	8.312	5.000
812	5/16-18	5.375	2.250	1524	3/8-16	11.250	5.000
108	5/16-18	3.375	3.062	1529	3/8-16	14.125	5.000
1012	5/16-18	5.312	3.062	1616	3/8-16	7.375	5.438
1016	5/16-18	7.375	3.062	1620	3/8-16	9.375	5.438
1020	5/16-18	9.375	3.062	1623	3/8-16	11.125	5.438
1112	5/16-18	4.562	3.312	1626	3/8-16	12.375	5.438
1114	5/16-18	5.562	3.312	1629	3/8-16	14.125	5.438
1118	5/16-18	7.562	3.312	1635	3/8-16	17.125	5.438
1123	5/16-18	10.312	3.312	1724	3/8-16	11.250	5.750
1212	5/16-18	4.500	3.812	1729	3/8-16	14.125	5.750
1215	5/16-18	6.000	3.812	1818	3/8-16	8.375	6.438
1220	5/16-18	8.500	3.812	1820	3/8-16	9.375	6.438
1223	5/16-18	10.250	3.812	1823	3/8-16	11.125	6.438
*1315	3/8-16	5.812	4.250	1826	3/8-16	12.375	6.438
*1318	3/8-16	7.312	4.250	1829	3/8-16	14.125	6.438
1321	3/8-16	8.688	4.250	1835	3/8-16	17.125	6.438
1323	3/8-16	10.062	4.250	1924	1/2-13	11.250	7.250
1326	3/8-16	11.312	4.250	1929	1/2-13	14.125	7.250
1329	3/8-16	13.062	4.250	1935	1/2-13	17.125	7.250
				2424	1/2-13	11.250	8.875
				2429	1/2-13	14.125	8.875
				2435	1/2-13	17.125	8.875

*New X dimension effective 10/02.